


Cat. 6A Keystone Jack Installing Instruction

- Strip approximately 40mm of the cable jacket, cut off the plastic cross, and separate the wires into 4 pairs.

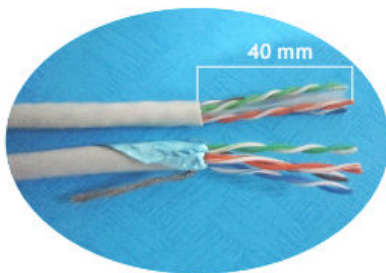

- Wiring Configurations

T568A

Pin 1 White/Green

Pin 2 Green

Pin 3 White/Orange

Pin 4 Blue

Pin 5 White/Blue

Pin 6 Orange

Pin 7 White/Brown

Pin 8 Brown

T568B

Pin 1 White/Orange

Pin 2 Orange

Pin 3 White/Green

Pin 4 Blue


Pin 5 White/Blue

Pin 6 Green


Pin 7 White/Brown

Pin 8 Brown

- Insert the wires through the cap, and lay the wires in the correct slots according to the wiring diagram on the cap. Trim the wires flush with the cap.

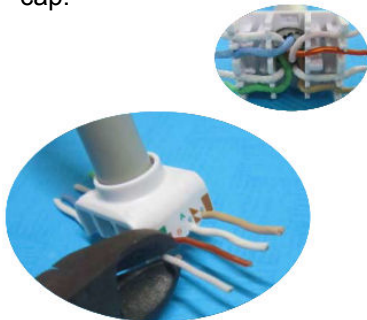

- Match the T-shape rib in the cap with the corresponding cavity on IDC, and put the cap on the IDC.

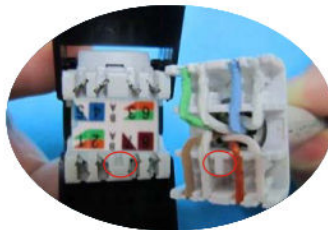

- Press the cap down to the IDC and make sure the wires deeper than the tiny teeth in the IDC slots.



The tiny teeth on the outer side of IDC slots.



- Close up the outer cap by pushing down both sides of the outer cap until it clicks.



- Tie up the cable and finish. (769221)

Unshield




- Connect the drain wire to the shielded shell. (767221)

Shielded




Cat. 6A Keystone Jack Montageanleitung

1. Entfernen Sie etwa 40 mm des Kabelmantels, entfernen Sie das Kunststoffkreuz und trennen Sie die Adern in 4 Paare auf.

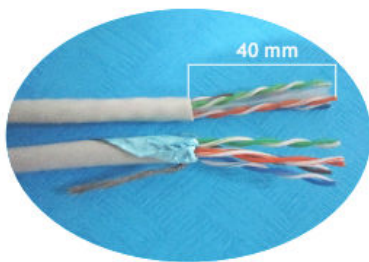

3. Führen Sie das Kabel durch den Kamm und legen die Drähte gemäß der Farbkennzeichnung in die richtigen Slots. Schneiden Sie die Adern bündig mit der Kappe ab.

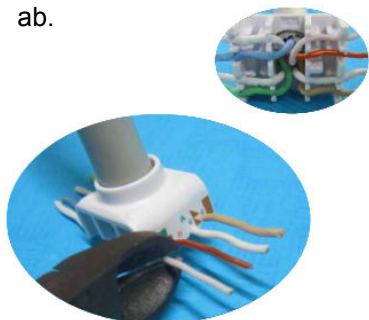

6. Schließen Sie die äußeren Klappen bis beide Seiten mit einem hörbaren „Klick“ einrasten.



2. Verkabelungskonfigurationen


T568A

Pin 1	Weiß/Grün
Pin 2	Grün
Pin 3	Weiß/Orange
Pin 4	Blau
Pin 5	Weiß/Blau
Pin 6	Orange
Pin 7	Weiß/Braun
Pin 8	Braun

T568B

Pin 1	Weiß/Orange
Pin 2	Orange
Pin 3	Weiß/Grün
Pin 4	Blau
Pin 5	Weiß/Blau
Pin 6	Grün
Pin 7	Weiß/Braun
Pin 8	Braun

4. Legen Sie die T-förmige Nase auf dies Gegenstück der IDC und stecken Sie den Kamm auf den IDC.

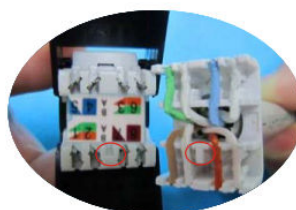

5. Drücken Sie den Kamm auf den IDC und stellen Sie sicher, dass die Drähte tief genug in den IDC Slots sitzen.



The tiny teeth on the outer side of IDC slots.



7. Befestigen Sie das Kabel mit dem Kabelbinder. (769221)

Unshield



- Verbinden Sie den Schirmdraht mit dem geschirmten Gehäuse. (767221)

Shielded

